This is the Revision D verion of the AnalogIn4 RoboBrick. The status of this project is work in progress.

AnalogIn4 Robobrick (Revision D)

Table of Contents

This document is also available in <u>PDF</u> format.

- 1. Introduction
- 2. Programming
- 3. Hardware
 - ♦ 3.1 Circuit Schematic
 - ♦ 3.2 Printed Circuit Board
 - ♦ 3.3 Construction Instructions
- 4. Software
- <u>5</u>. Issues

1. Introduction

The AnalogIn4 RoboBrick allows for the input of up to 4 analog voltages between 0 and 5 volts with a resolution of 8 bits.

2. Programming

The AnalogIn4 RoboBrick is continuously reading the analog inputs from its four A/D pins. The controlling program can just read the results of the digital conversion, or it can have the result down converted into a single binary bit. Each pin has has a threshold high and threshold low register that is used for the down conversion. Whenever the digital conversion exceeds the high threshold register, the down conversion results in a 1. Whenever the digital conversion is lower than the low threshold register, the down conversion results in a 0. A hysterisis effect can be introduced by having some spread between the high and low threshold values.

There AnalogIn4 RoboBrick operates in either regular mode or Vref mode. In regular mode, all four inputs are A/D converted between 0 and 5 volts. In Vref mode, input 1 is used as Vref, the highest expected input voltage, and there remaining three inputs are A/D converts between 0 and Vref.

After the down coversions to binary bits, the result is 4-bits of binary data. A complement mask can be used to selectively invert individual bits in the 4-bit data.

The AnalogIn4 RoboBrick supports <u>RoboBrick Interrupt Protocol</u> for those lines that are being used as inputs. The interrupt pending bit is set whenever the the formula:

$$L\&(\sim I) \mid H\&I \mid R\&(\sim P)\&I \mid F\&P\&(\sim I)$$

is non-zero, where:

- I is the current input bits XOR'ed with the complement mask (C)
- P is the previous value of I
- L is the low mask

AnalogIn4 RoboBrick (Revision D)

- H is the high mask
- R is the raising mask
- F is the falling mask

and

- ~ is bit—wise complement
- | is bit-wise OR
- & is bit-wise AND

Once the interrupt pending bit is set, it must be explicitly cleared by the user.

In addition to the <u>common shared commands</u> and the <u>shared interrupt commands</u>, the AnalogIn4 RoboBrick supports following commands:

Command	Send/ Receive			By	te	Val	lue			Discussion
		7	6	5	4	3	2	1	0	
Read Pin	Send	0	0	0	0	0	0	b	b	Read pin bb and respond with 8-bit value vvvvvvvv
	Send	v	v	v	v	v	v	v	v	
Read Binary Values	Send	0	0	0	0	0	1	0	0	Return the binary values <i>abcd</i> (after XOR'ing with complement mask)
	Receive	0	0	0	0	a	b	c	d	
Read Raw Binary	Send	0	0	0	0	0	1	0	1	Return the raw binary values <i>abcd</i> (no XOR with complement mask)
	Receive	0	0	0	0	а	b	c	d	
Reset	Send	0	0	0	0	0	1	1	0	Reset everything to zero
Read Complement Mask	Send	0	0	0	0	1	0	0	0	Return and return the complement mask cccc
	Receive	0	0	0	0	c	c	c	c	
Read High Mask	Send	0	0	0	0	1	0	0	1	Return and return the high mask <i>hhhh</i>
	Receive	0	0	0	0	h	h	h	h	
Read Low Mask	Send	0	0	0	0	1	0	1	0	Return and return the high mask <i>llll</i>
	Receive	0	0	0	0	l	l	l	l	
Read Raising Mask	Send	0	0	0	0	1	0	1	1	Return and return the raising mask rrrr
	Receive	0	0	0	0	r	r	r	r	
Read Falling Mask	Send	0	0	0	0	1	1	0	0	Return and return the falling mask fffff
	Receive	0	0	0	0	f	f	f	f	
Read Vref Mode	Send	0	0	0	0	1	1	0	1	Read and return the Vref mode bit v
	Receive	0	0	0	0	0	0	0	f	
Set Vref Mode	Send	0	0	0	0	1	1	1	v	Set the Vref mode to <i>v</i> (0=regular 1=Vref Mode)
Read High Threshold	Send	0	0	0	1	0	0	b	b	Read and return high threshold for pin bb of hhhhhhhhh
	Receive	h	h	h	h	h	h	h	h	
Read Low Threshold	Send	0	0	0	1	0	1	b		Read and return low threshold for pin bb of [11111111]
	Receive	l	l	l	l	l	l	l	l	
Set High Threshold	Send	0	0	0	1	1	0	b	b	Set high threshold for pin bb to hhhhhhhh
	Send	h	h	h	h	h	h	h	h	


Set Low Threshold	Send	0	0	0	1	1	1	b	b	Set low threshold for pin bb to llllllll
	Send	l	l	l	l	l	l	l	l	
Set Complement Mask	Send	0	0	1	0	c	c	c	c	Set complement mask to cccc
Set High Mask	Send	0	1	0	0	h	h	h	h	Set high mask to hhhh
Set Low Mask	Send	0	1	0	1	l	l	l	l	Set low mask to <i>llll</i>
Set Raising Mask	Send	0	1	1	0	r	r	r	r	Set raising mask to rrrr
Set Falling Mask	Send	0	1	1	1	f	f	f	f	Set falling mask to fffff
Read Interrupt Bits	Send	1	1	1	0	1	1	1	1	Return the interrupt pending bit p and the interrupt enable bit e .
	Receive	0	0	0	0	0	0	e	p	
Set Interrupt Commands	Send	1	1	1	1	0	c	c	c	Set Interrupt Command ccc.
Shared Commands	Send	1	1	1	1	1	c	С	c	Execute common shared command ccc

3. Hardware

The hardware consists of a circuit schematic and a printed circuit board.

3.1 Circuit Schematic

The schematic for the AnalogIn4 RoboBrick is shown below:

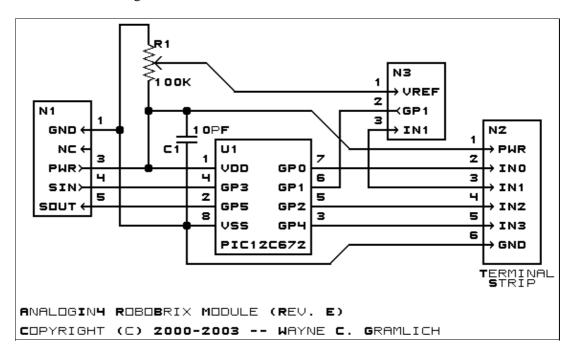

The parts list kept in a separate file — <u>analogin4.ptl</u>.

3.2 Printed Circuit Board

The printed circuit board files are listed below:

analogin4 back.png

3. Hardware 3

The solder side layer.

analogin4 front.png

The component side layer.

analogin4 artwork.png

The artwork layer.

analogin4.gbl

The RS-274X "Gerber" back (solder side) layer.

analogin4.gtl

The RS-274X "Gerber" top (component side) layer.

analogin4.gal

The RS-274X "Gerber" artwork layer.

analogin4.drl

The "Excellon" NC drill file.

analogin4.tol

The "Excellon" tool rack file.

3.3 Construction Instructions

The construction instructions are in separate file to be a little more printer friendly.

4. Software

The Analogin4 software is available as one of:

analogin4.ucl

The µCL source file.

analogin4.asm

The resulting human readable PIC assembly file.

analogin4.lst

The resulting human readable PIC listing file.

analogin4.hex

The resulting Intel[®] Hex file that can be fed into a PIC12C5xx programmer.

The following Analogin4 test software is available:

analogin4 test.ucl

The µCL source file.

analogin4 test.asm

The resulting human readable PIC assembly file.

analogin4 test.lst

The resulting human readable PIC listing file.

analogin4 test.hex

The resulting Intel[®] Hex file that can be fed into a PIC16F84 programmer.

5. Issues

Any fabrication issues that come up will be discussed here.


Copyright (c) 2000–2002 by Wayne C. Gramlich. All rights reserved.

AnalogIn4 RoboBrick (Revision D)

A. Appendix A: Parts List


```
# Parts list for AnalogIn4 RoboBrix (Rev. E)
#
C1: Capacitor10pF - 10 pF Ceramic Capacitor [Jameco: 15333]
N1: Header1x5.AnalogIn4 - 1x5 Male Header [5/40 Jameco: 160881]
N2: TerminalStrip6.AnalogIn4 - 6 Junction Terminal Strip [2 Jameco: 189667]
N3: Header1x3.AnalogIn4 Header1x3 - 1x3 Male Header [3/40 Jameco: 160881]
# The shorting block goes onto N3; it is not present on the PCB.
N4: ShortingBlock - Shorting Block [Jameco: 22023]
R1: ResistorTrimPot100K.AnalogIn4 - 100K Trim Potentiometer [Jameco: 95484]
U1: PIC12C672.AnalogIn4B - Microchip PIC12C672 [Digikey: PIC12C672-04/P-ND]
# Each RoboBrick should have a connector cable:
N5-6: CableHeader1x5 - 1 x 5 Female Shell [Jameco: 163686]
N7-14: CablePinFemale - Female Pin [Jameco: 100765]
N15-16: CablePinMale - Male Pin [Jameco: 145357]
```

B. Appendix B: Artwork Layer

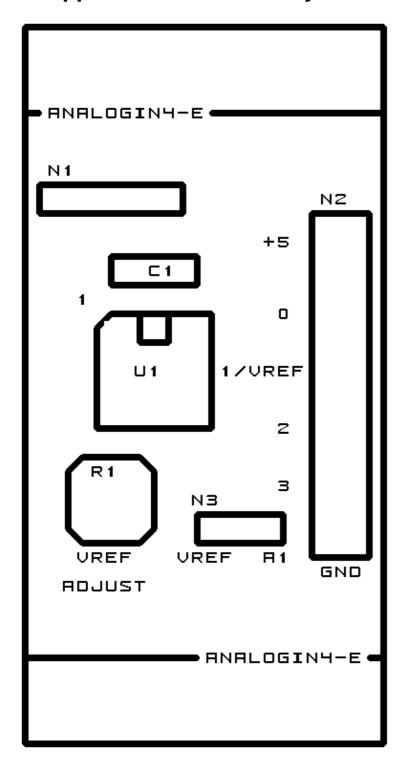

C. Appendix C: Back (Solder Side) Layer




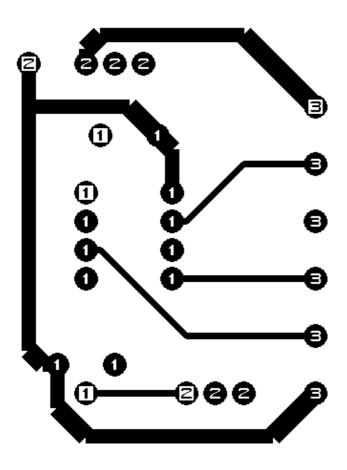



D. Appendix D: Front (Component Side) Layer



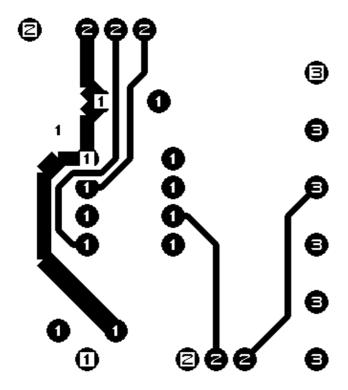

8 8 8